



STEVAL-IFS001V1 evaluation kit with MEMS

Introduction

This user manual gives an overview of the use of STEVAL-IFS001V1 kit with MEMS (Micro-Electro-Mechanical System) evaluation board.

As shown in the next section, this evaluation board consists of the DK3420 (uPSD evaluation board) and the ST-MEMS-xx-EVAL (MEMS evaluation module). When connected together as an evaluation kit, MEMS applications can be evaluated and measured through a USB connection to a PC. A brief introduction to the MEMS software, MEMS USB Reader 7.x, is also provided.

MEMS can be used in a variety of vibration sensor and intelligent movement estimator situations, for example:

- Vibration analysis
 - Motor control
 - High buildings
- Control of position
 - Stability system for caravans
 - Stability for cable cars
- Sport
 - Sport shoes
 - Speedometers
- Automotive
 - Black box
 - Intelligent driver sensors
 - Car alarms
- Navigation
 - Dead-reckoning for GPS
- Logistics
 - Blackbox for containers (sensing)
- Robotics
 - Control of robot arms (welding robots)
- Security
 - Vibration detection (broken window alarm)

Contents

1	Overview of MEMS evaluation boards	3
2	Pin description	6
3	I2C and SPI use	7
3.1	I2C and SPI connections	7
3.2	Recommendations for I2C use	8
3.3	Recommendations for SPI use	8
4	uPSD software use	9
4.1	Digital or analog module	9
4.2	LED signalization	9
4.3	Selection of operation mode	9
4.4	On-line measurement	10
4.5	Off-line measurement	10
4.6	Read out data from Flash	10
5	MEMS software - MEMS_USB_Reader_7x	12
5.1	Initial window and features overview	12
5.2	MEMS values	12
5.3	Butterworth filters	13
5.4	FFT analysis	13


1 Overview of MEMS evaluation boards

Figure 1. STEVAL-IFS001V1




This consists of DK3420 and ST-MEMS-XX-EVAL

Figure 2. DK3420 - USB Demonstration board with μ PSD Turbo Plus

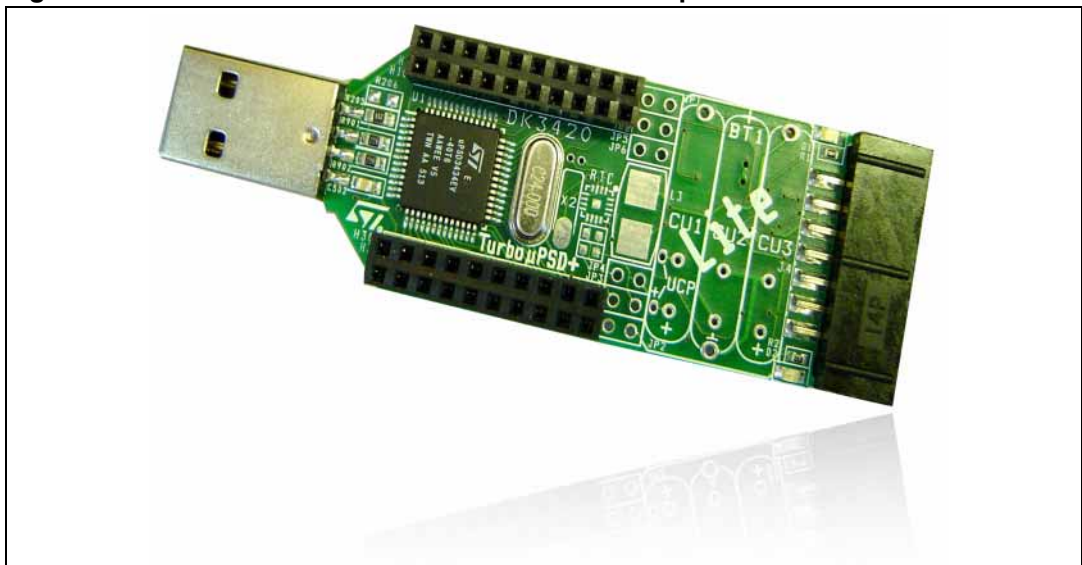

For a pin description, see [Section 2](#). Further information is available in the uPSD34xx datasheet and online, from <http://www.st.com>

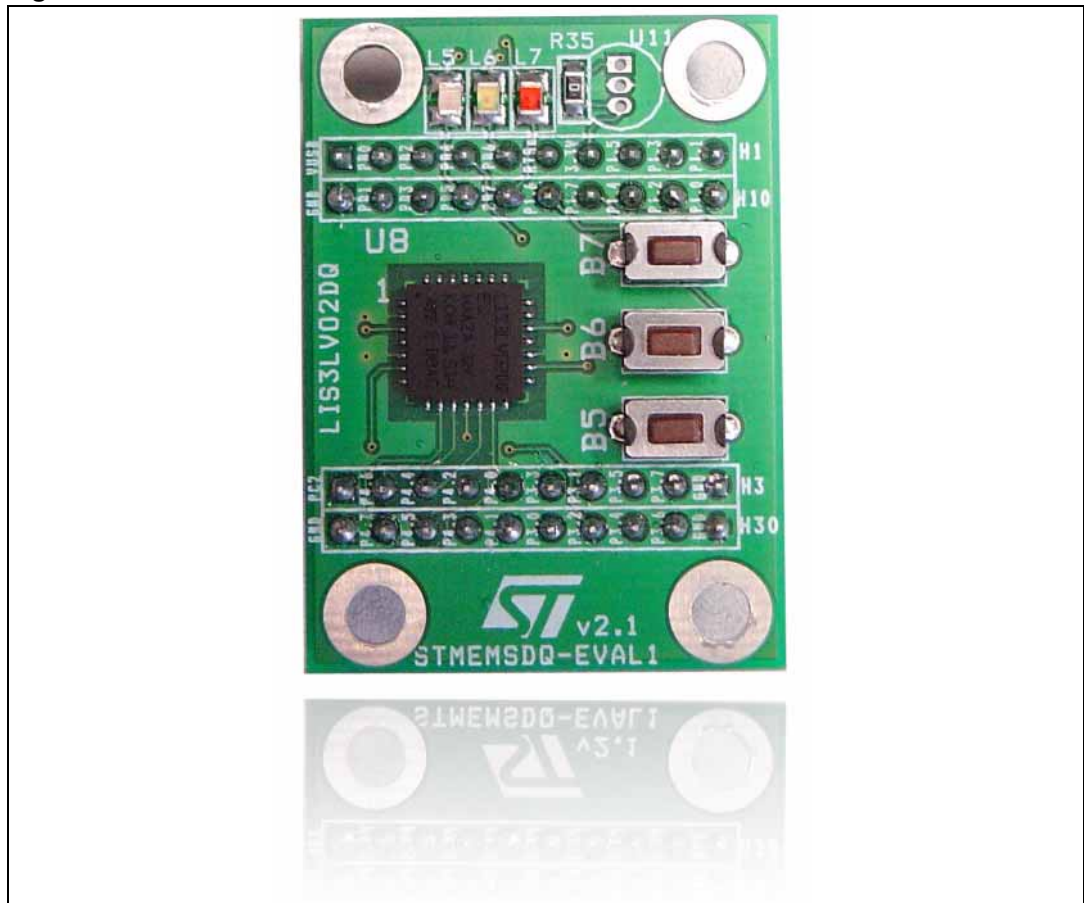Figure 3. ST-MEMS-DQ-EVAL

The MEMS module ST-MEMS-DQ-EVAL is designed for the evaluation of a MEMS application which can be used in a variety of vibration sensor and intelligent movement estimator situations.


For a pin description, see [Section 2](#). Additionally, a description of I²C and SPI use is provided in [Section 3](#).

Additionally, for further information on this module, refer to the user manual UM0152 “MEMS Module STMEMSDQ-EVAL1 Dedicated to uPSD Evaluation Kit DK34XX”.

Features include:

- LIS3LV02DQ (QFN28)
- I²C or SPI
- 3x buttons
- 3x LEDs

Figure 4. ST-MEMS-AQ-EVAL (check for availability)

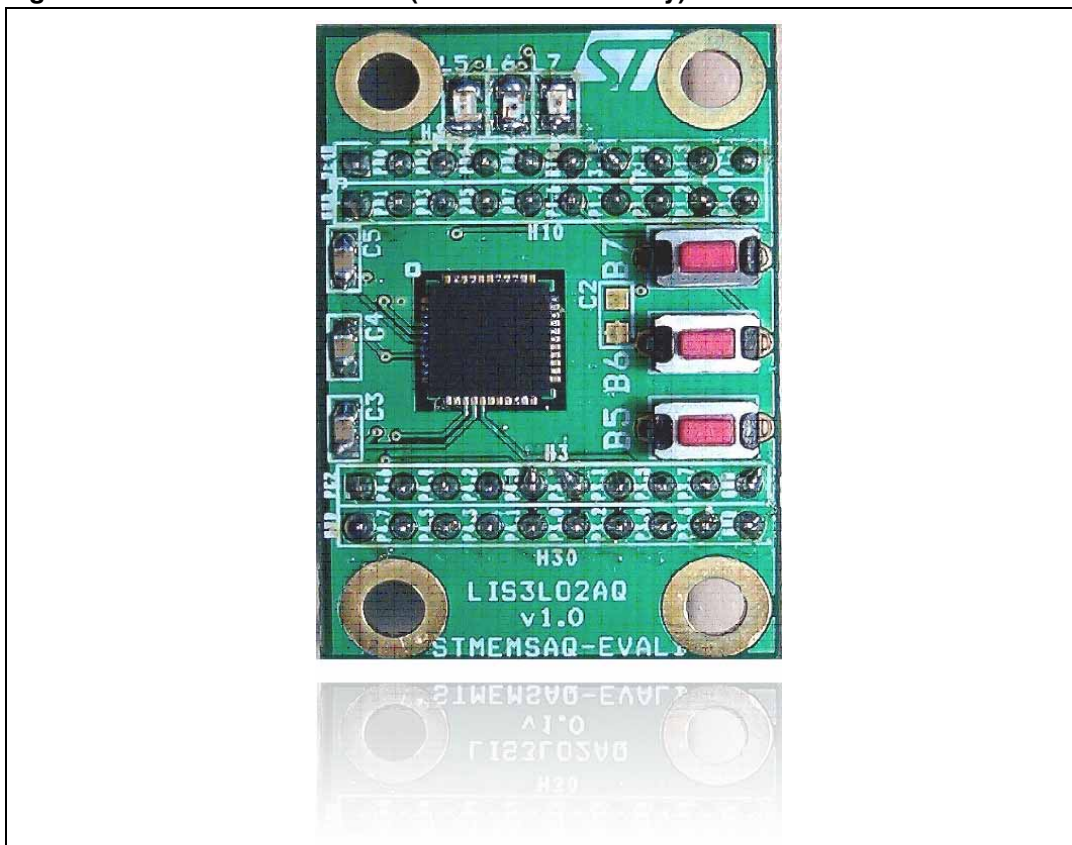


Components include:

- LIS3L02AQ (QFN44)
- 3x analog outputs
- 3x buttons
- 3x LEDs

2 Pin description

Table 1. DK3420 - USB demonstration board with μ PSD Turbo Plus and ST-MEMS-DQ-EVAL

H1	5V	PB0	PB2	PB4	PB6 LED6	RESET	3.3V	P1.5 Ain5 BUT5	P1.3 Ain3	P1.1 Ain1
H10	GND	PB1	PB3	PB5 LED5	PB7 LED7	P1.6 Ain6 BUT6	P1.7 Ain7 BUT7	P1.4 Ain4	P1.2 Ain2	P1.0 Ain0

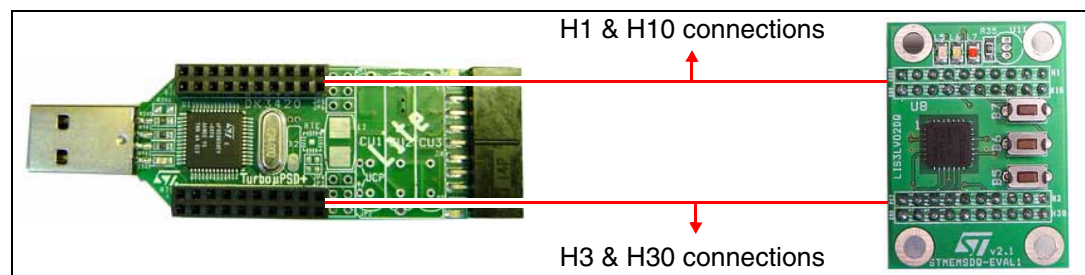


H3	PC2	P4.6 SDO	P4.4 SPC	P4.2	P4.0	P3.3	P3.1 UART0 out	P3.5	P3.7 SCL	GND
H30	GND	P4.7 CS	P4.5 SDI	P4.3	P4.1	P3.0 UART0 in	P3.2	P3.4	P3.6 SDA	GND

Legend:

- AINx - Analog input x
- SPC - SPI clock
- SDI - SPI data input (view from μ PSD)
- SDO - SPI data output (view from μ PSD)
- CS - SPI chip select
- UART0out - UART data out
- UART0in - UART data in
- SDA - I²C data
- SCL - I²C clock

3 I²C and SPI use

Figure 5. Board schematics for ST-MEMS-DQ-EVAL

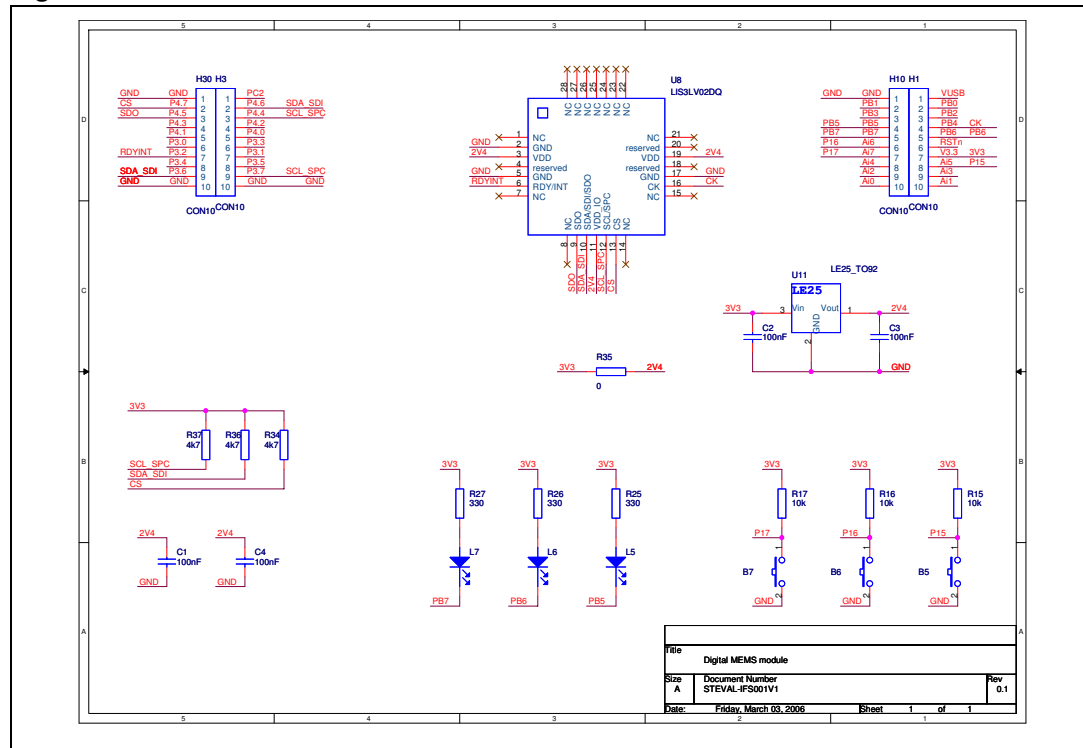

3.1 I²C and SPI connections

Signal (on MEMS)	I2C (on uPSD)	SPI (on uPSD)
SCL_SPC	P3.7	P4.4
SDO	NC	P4.5
SDA_SDI	P3.6	P4.6
CS	NC	P4.7

3.2 Recommendations for I²C use

- With I²C, the use of R36 & R37 pull-up resistors (4k7) is advised
- The use of resistor R34 (10k) is not normally necessary as uPSD has an internal pull-up of around 100k.
- Because SCL_SPC and SDA_SDI are used for I²C and SPI together, care should be taken with the following instructions:
 - First (*important*), disable SPI and set the SPI pins as floating inputs
 - Set P4.7 (CS) as GPIO output and write '1' to activate I²C on the MEMS chip
 - Enable I²C on your micro and start the communication

3.3 Recommendations for SPI use

- With SPI, the use of resistors R36, R37 is NOT advised
- The use of resistor R34 (10k) is not normally necessary as uPSD has an internal pull-up of around 100k.
- Because SCL_SPC and SDA_SDI are used for I²C and SPI together, care should be taken with the following instructions:
 - First (*important*), disable I²C and set the I²C pins as floating inputs
 - Activate your SPI. P4.7 is a part of SPI and should be '0', otherwise set P4.7 (CS) as GPIO output and write '0' directly. This instructs the MEMS chip to use SPI
 - Start the communication

4 uPSD software use

4.1 Digital or analog module

The program automatically detects whether a module is digital or analog.

The recognition is based on the value on pin P3.3. A digital module has this pin unconnected which is the same as logic '1' because of an internal uPSD pull-up. Analog modules must employ a pull-down resistor to enable the detection of logic '0'.

4.2 LED signalization

- LED5 (green) blinking
Data is being read. Digital modules are using I²C, analog modules are using ADC.
- LED6 (yellow) blinking
This indicates USB communication, data is being sent.
- LED7 (red) blinking
The program is running, this led is toggled in main.

Immediately after the module is plugged in, all LEDs are lit while initialization is in process. When uPSD, the peripherals (I2C, ADC, etc) and MEMS are initialized, the LEDs are turned off. Immediately following this, the main starts and LED7 blinks.

- If LED7 doesn't start blinking, the initialization will have failed.
 - a) Check hardware
 - b) Try to restart the PC
 - c) Re-program uPSD
 - d) If still not working, contact support

4.3 Selection of operation mode

During the initialization an operation mode can be selected by pressing buttons:

- no button is pressed
On-line measurement (default)
- BUT5 is pressed
Off-line measurement (it erases the Flash for new measurements which takes around 5s for the 256KB flash)
- BUT6 is pressed
Read out data from Flash (useful after the off-line measurement)
- BUT7 is pressed
No effect.

Note: Press the button first and then plug the module into the USB.

4.4 On-line measurement

During on-line measurement, data is read from MEMS and sent via USB to the PC.

Logically, all three LEDs should blink. In this mode, the buttons have the following meanings:

- no button is pressed
uPSD sends data from MEMS to the PC (a packet with MEMS data)
- BUT5 is pressed
No effect.
- BUT6 is pressed
No effect.
- BUT7 is pressed
In the case of digital MEMS, uPSD reads its registers and sends this information via USB (a packet with registers)

4.5 Off-line measurement

Ready to start the measurement. Normally LED7 blinks.

- no button is pressed
No effect.
- BUT5 is pressed
Pause/Stop measurement.
- BUT6 is pressed
Start measurement, LED5 blinks to indicate data is being read and stored (it stops automatically when the Flash is full).
- BUT7 is pressed
If measurements have not started, the sample frequency can be changed. Possible frequencies are 40 or 160 Hz. The selection is indicated by the LED7 blinking speed.

Off-line measure time	@40Hz	@160Hz
128KB (uPSD3433)	576s	136s
256KB (uPSD3434)	1092s	273s

4.6 Read out data from Flash

Ready to start sending data stored in Flash via USB. Normally LED7 is blinking.

- no button is pressed
No effect
- BUT5 is pressed
Start sending data. uPSD sends data from Flash and LED6 blinks (a packet with MEMS data). It reads the entire Flash. Any part which doesn't contain relevant MEMS data you will get 0xFF. After the end of the Flash range, 0xFF will also be sent. 0xFF

values translate as <-1,-1,-1> readings on the PC MEMS USB Reader, which should be considered to detect both false readings and end of Flash data.

- BUT6 is pressed
No effect.
- BUT7 is pressed
No effect.

5 MEMS software - MEMS_USB_Reader_7x

5.1 Initial window and features overview

Figure 6. Screenshot of initial screen of MEMS USB Reader 7.1




Main features available in the MEMS USB Reader include:

- MEMS values in time graph
- Butterworth filters
- FFT analysis

5.2 MEMS values

Figure 7. Screenshot showing MEMS values in time graph

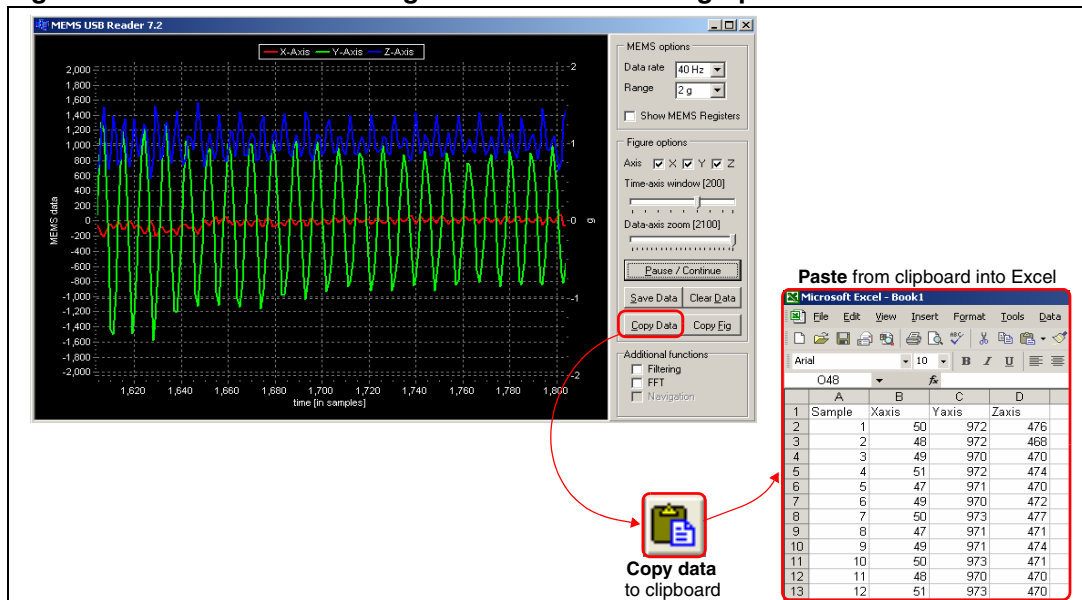


Use the MEMS Values screen to:

- Copy data into the Excel directly via clipboard
- Copy the graphic figure (graph) as a metafile via clipboard
- Save data into a CSV file

5.3 Butterworth filters

Figure 8. Screenshot of the filtering window with Butterworth filter options

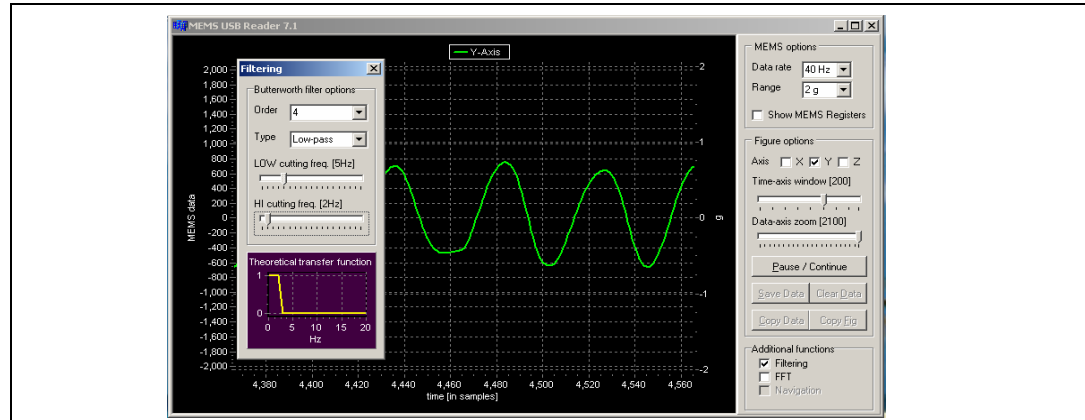


Filtering options include:

- Butterworth low-pass & hi-pass filters order 1-4
- Butterworth band pass filter order 1
- It's possible to hide the axis (currently, only the Y-Axis is shown)

5.4 FFT analysis

Figure 9. Screenshot of FFT analysis

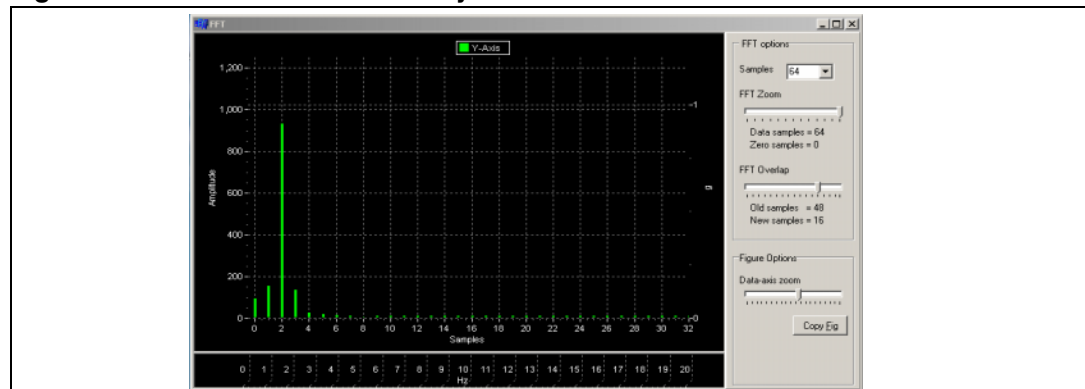

FFT (Fast Fourier Transform) analysis features and options include:

- FFT for 16, 32, 64, 128 samples
- Allows FFT zoom (filling with zeros)
- Allows to change FFT overlap
- Copy of the figure to clipboard as a metafile

Please Read Carefully:

Information in this document is provided solely in connection with ST products. STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, modifications or improvements, to this document, and the products and services described herein at any time, without notice.

All ST products are sold pursuant to ST's terms and conditions of sale.

Purchasers are solely responsible for the choice, selection and use of the ST products and services described herein, and ST assumes no liability whatsoever relating to the choice, selection or use of the ST products and services described herein.

No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted under this document. If any part of this document refers to any third party products or services it shall not be deemed a license grant by ST for the use of such third party products or services, or any intellectual property contained therein or considered as a warranty covering the use in any manner whatsoever of such third party products or services or any intellectual property contained therein.

UNLESS OTHERWISE SET FORTH IN ST'S TERMS AND CONDITIONS OF SALE ST DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY WITH RESPECT TO THE USE AND/OR SALE OF ST PRODUCTS INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE (AND THEIR EQUIVALENTS UNDER THE LAWS OF ANY JURISDICTION), OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

UNLESS EXPRESSLY APPROVED IN WRITING BY AN AUTHORIZED REPRESENTATIVE OF ST, ST PRODUCTS ARE NOT DESIGNED, AUTHORIZED OR WARRANTED FOR USE IN MILITARY, AIR CRAFT, SPACE, LIFE SAVING, OR LIFE SUSTAINING APPLICATIONS, NOR IN PRODUCTS OR SYSTEMS, WHERE FAILURE OR MALFUNCTION MAY RESULT IN PERSONAL INJURY, DEATH, OR SEVERE PROPERTY OR ENVIRONMENTAL DAMAGE.

Resale of ST products with provisions different from the statements and/or technical features set forth in this document shall immediately void any warranty granted by ST for the ST product or service described herein and shall not create or extend in any manner whatsoever, any liability of ST.

ST and the ST logo are trademarks or registered trademarks of ST in various countries.

Information in this document supersedes and replaces all information previously supplied.

The ST logo is a registered trademark of STMicroelectronics. All other names are the property of their respective owners.

© 2006 STMicroelectronics - All rights reserved

STMicroelectronics group of companies

Australia - Belgium - Brazil - Canada - China - Czech Republic - Finland - France - Germany - Hong Kong - India - Israel - Italy - Japan - Malaysia - Malta - Morocco - Singapore - Spain - Sweden - Switzerland - United Kingdom - United States of America

www.st.com